


How to buy and download the new Styles for EVENT

Go to KETRON website (www.ketron.it).

Click on "**Log In / Register**".



Log in with your KETRON account or create a new one, if you don't have one.

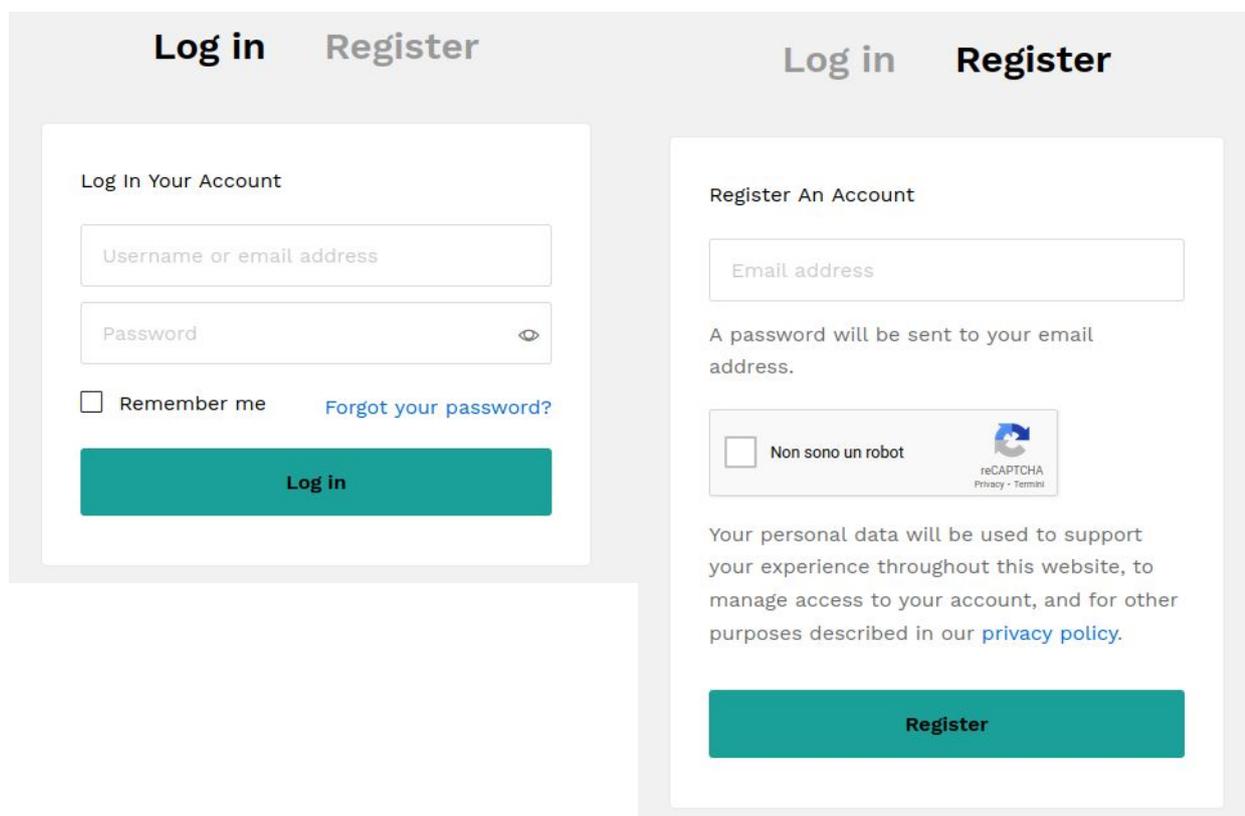Two side-by-side forms for user authentication. The left form is titled "Log In Your Account" and contains fields for "Username or email address" and "Password" (with a visibility toggle), a "Remember me" checkbox, a "Forgot your password?" link, and a teal "Log in" button. The right form is titled "Register An Account" and contains an "Email address" field, a note that a password will be sent to the email, a "Non sono un robot" checkbox with a reCAPTCHA logo, and a teal "Register" button. Below the register form is a paragraph of text about data usage and a "privacy policy" link.


Click on "**Products > Music Software**".



The page with all styles will appear on screen. Choose a style and click on **"Shop"** to put the article into the basket.


Codice	Titolo	Descrizione	Autore	Traccia audio	Prezzo	Acquista
9KS003	ACOUSTIC SAMBA	REAL STYLE ACOUSTIC SAMBA	Ketron		€ 25,00	Shop
9KS019	HELENE HIT	LIVE HELENE HIT	Ketron		€ 15,00	Shop
9KS004	BOSSA MANOUCHE	REAL STYLE BOSSA MANOUCHE	Ketron		€ 25,00	Shop
9KS020	PARTY WALTZ	LIVE PARTY WALTZ	Ketron		€ 15,00	Shop
9KS005	CLASSIC BOSSA	REAL STYLE CLASSIC BOSSA	Ketron		€ 25,00	Shop
9KS021	POP LEBEN	LIVE POP LEBEN	Ketron		€ 15,00	Shop

Click on the basket icon and then click on **"Checkout"**. Provide all required data to complete the purchase.

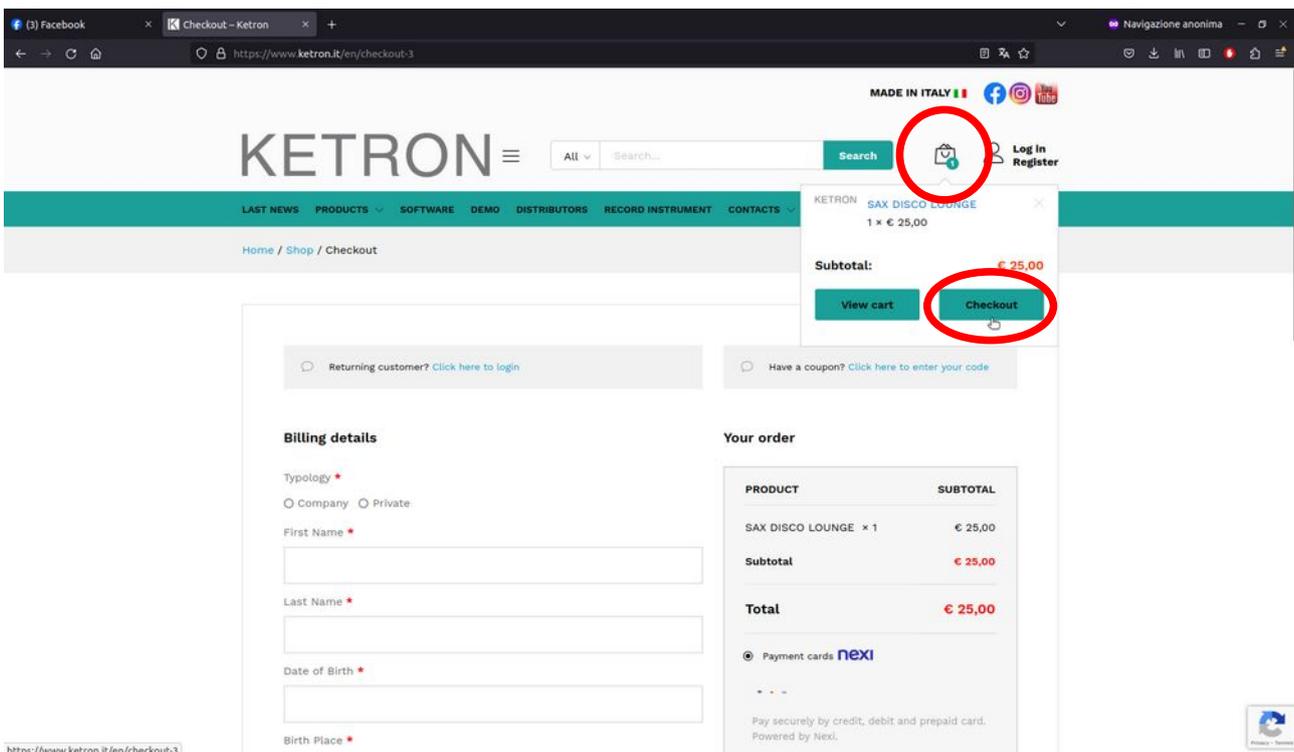


You will receive a confirmation email with all your order data.

To download the new styles, click on the user icon to enter in your personal area.

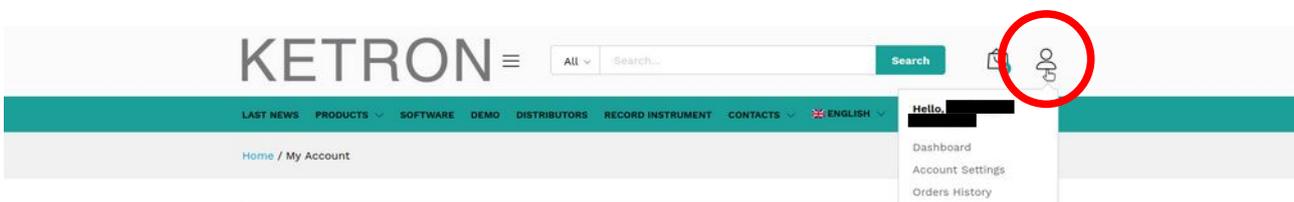

Click on "**Downloads**" on the left.

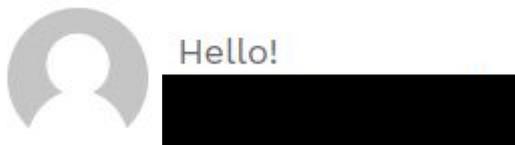

DASHBOARD
ORDERS
ADDRESSES
PAYMENT METHODS
ACCOUNT DETAILS
LOGOUT
DOWNLOADS


All the style you have purchased will appear on a table in the center of the page. Write the serial number of your instrument in the second column of the table and click on "**Save**" to register the style to your instrument.

Product title	Product Serial Number	Action
SAX DISCO LOUNGE	I4AA10 [REDACTED]	Download file
DISCO CHA	I4AA10 [REDACTED]	<input type="button" value="Generate file"/>
LINE DANCE CUMBIA	I4AA10 [REDACTED]	<input type="button" value="Save"/>

Now click on "**Generate file**" to prepare your download. Wait until completion.

LINE DANCE CUMBIA	I4AA10 [REDACTED]	<input type="button" value="Generate file"/>
-------------------	-------------------	--

When the file is ready, the "Generate file" button will disappear. Click on "Download file" to download the .EMC file.

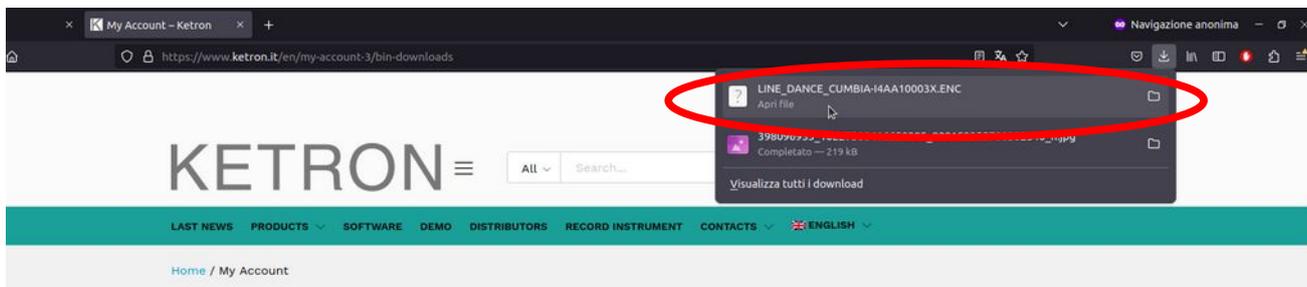

Copy the .EMC file into the instrument root and click on it to install the style into your instrument.